


Recommended Wiring

AMF – Wiring Diagram

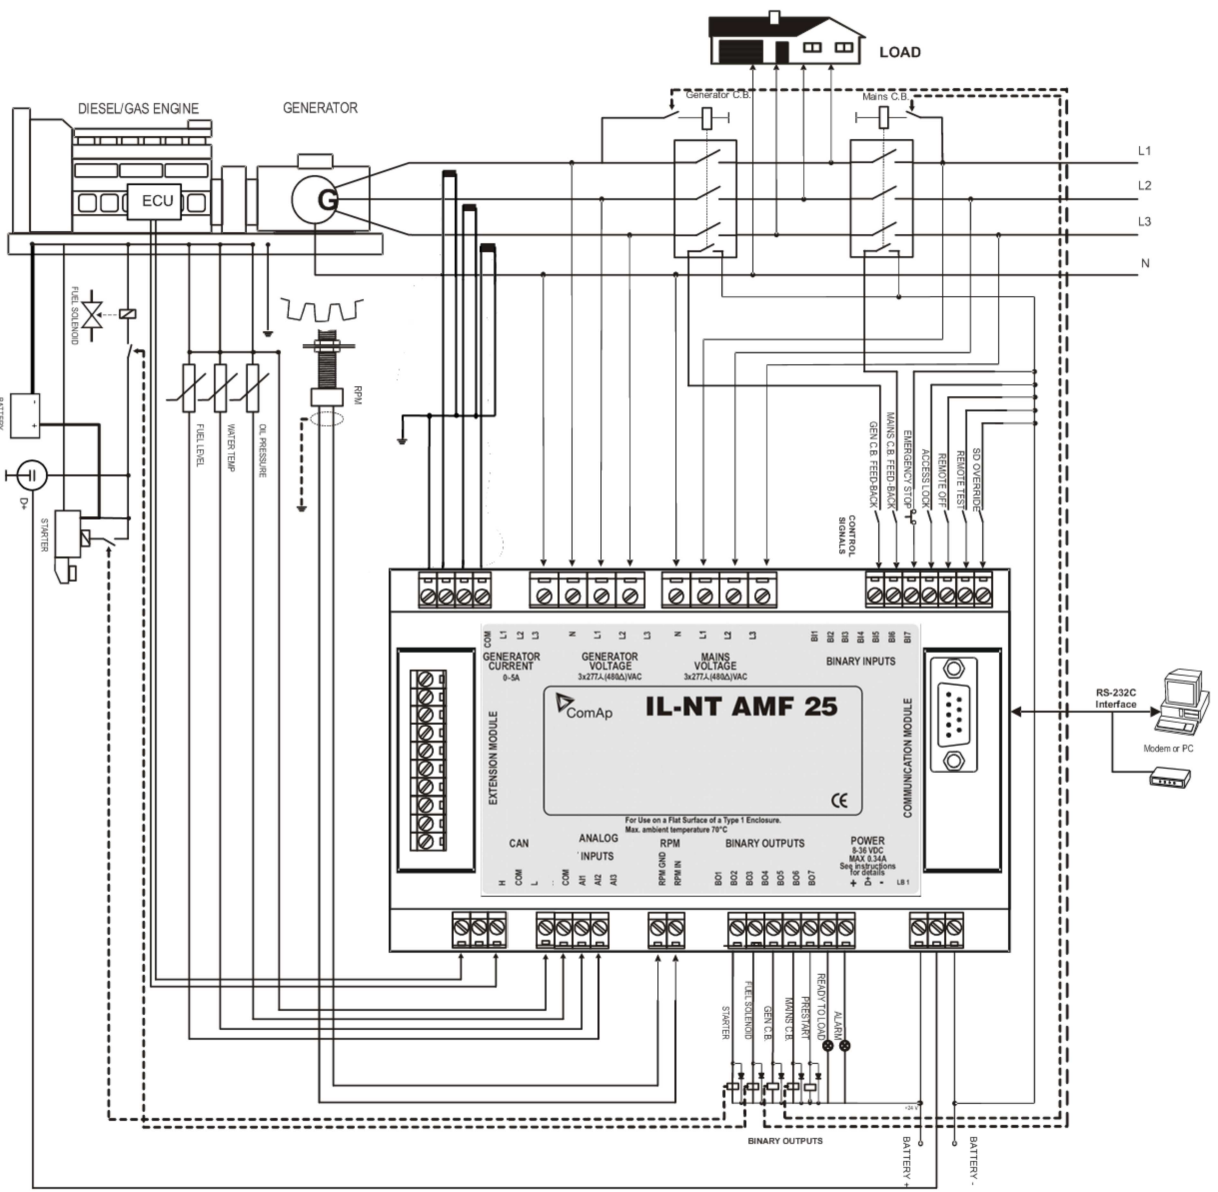

Hint:

MCB and GCB is recommended to be mechanically interlocked. It is possible to start Volvo and Scania engines via CAN bus. See [Engines started via CAN bus.](#)